INSTALLATION PROCEDURE (Sheet 1 of 4)

DO NOT DISCARD


PLEASE READ CAREFULLY BEFORE BEGINNING INSTALLATION.


Fixtures must be installed by licensed electricians in accordance with all local and national codes.

To prevent electrical shock, disconnect electrical supply before installing or servicing.

PICASSO LIGHTING

Before Beginning Installation, Locate the Following (4) Components, Gather Required Tools:

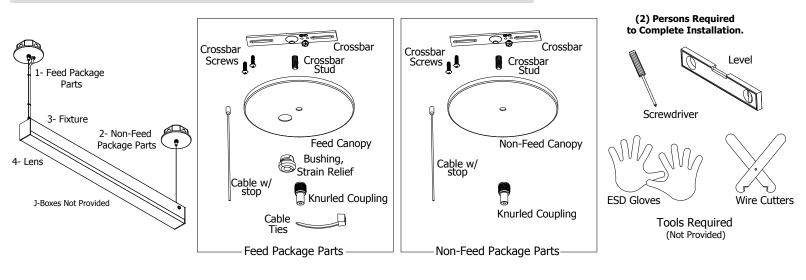

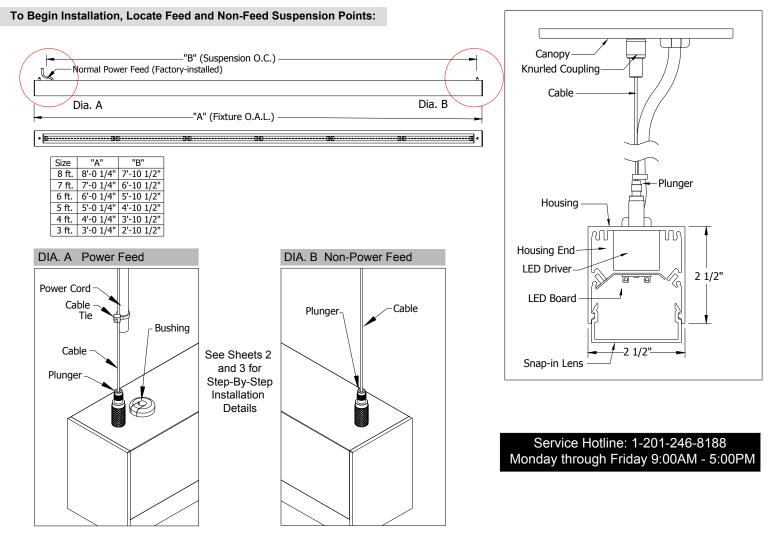



Position Canopy Over J-Box With Crossbar Stud And Wire Passing Through Hole In Canopy.

INSTALLATION PROCEDURE (Sheet 2 of 4) PICASSO LIGHTING POWER OFF Feed Suspension Assemblies @ Ceiling Dia. A 3 1 2 Stop J-Box (Not provided) 1/4-20 Knurled Coupling Crossbar Stud Crossba Cable Cable w/ Crossba Crossbar Screws Install 1/4-20 Crossbar Stud Into Crossbar Install Crossbar into J-Box Thread Stainless Steel Cable with (2) Crossbar Screws Through 1/4-20 Knurled Coupling 4 5 Neutral Dim -(White) (Purple) J-Box J-Box Dim -Ground (Grey) (Green) Crossbar Stud Line (Black) Emergency Ð Unswitched (Red) Canopy Canop

Thread Knurled Coupling On To Crossbar Stud Until Canopy Is Flush With Ceiling.


Power Cord @ Fixture

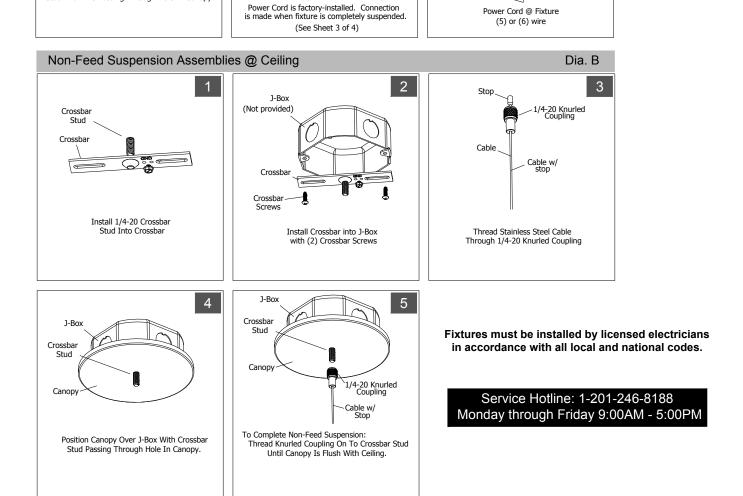

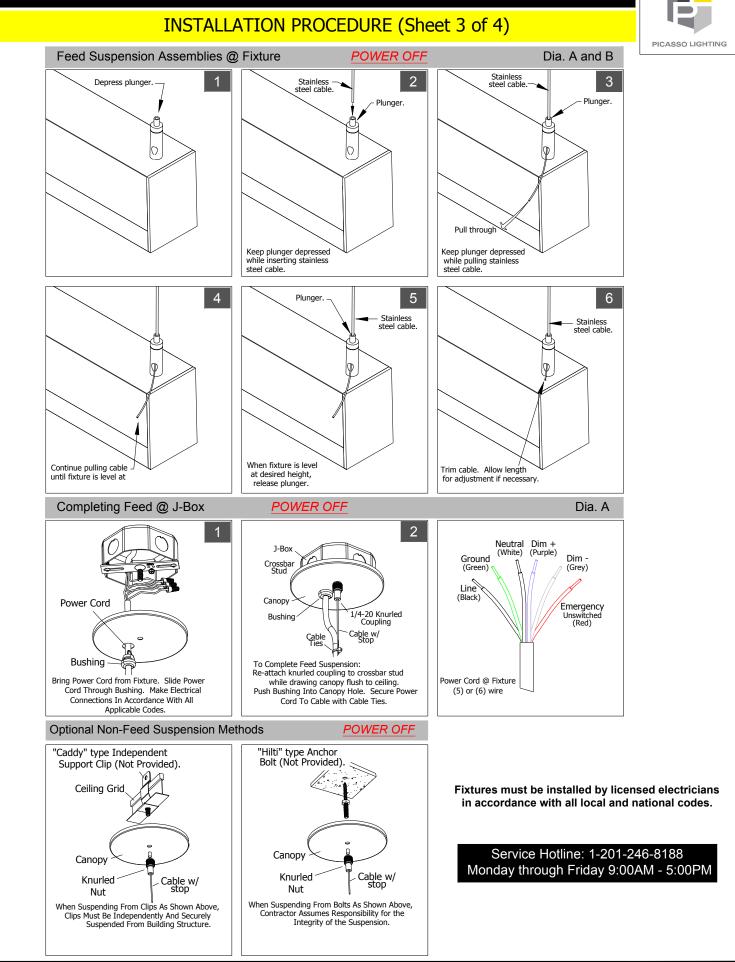

INSTALLATION PROCEDURE (Sheet 4 of 4)



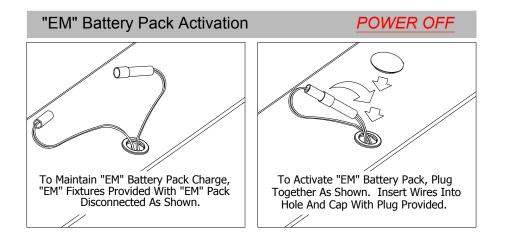

Installation and maintenance of the SIENNA luminaire may only be performed by qualified and licensed electricians in accordance with all applicable codes and standards.

Picasso Lighting Indstries, LLC assumes no responsibility or liability for any unauthorized changes or modifications to the SIENNA luminaire. The SIENNA luminaire is not intended for outdoor use.

Picasso Lighting Industries, LLC. shall assume no responsibility or liability for the integrity of the mounting surface and structure as well as the integrity of all components not provided by Picasso Lighting Industries, LLC.

Turn off line voltage and allow luminaire to completely cool before performing any maintenance including routine cleaning of luminaire.

Avoid touching LED light emitting surfaces while installing, replacing or providing maintenance to the luminaire.

Luminous flux and connected electrical load are subject to an initial tolerance of +/- 10%.

Color temperature (k) is subject to a tolerance of +/- 150k from the nominal value.

Any component contained is this luminaire can only be replaced by the manufacturer or an agent thereof.

Keep these INSTALLATION INSTRUCTIONS in a secure and readily accessible place for any future maintenance or for reference.

Service Hotline: 1-201-246-8188 Monday through Friday 9:00AM -5:00PM

DO NOT DISCARD PLEASE READ CAREFULLY BEFORE BEGINNING INSTALLATION.