RUSS series LED Individual

Wall Brackets

INSTALLATION PROCEDURE (Sheet 1 of 2)

DO NOT DISCARD PLEASE READ CAREFULLY BEFORE BEGINNING INSTALLATION.


Fixtures must be installed by licensed electricians in accordance with all local and national codes.

To prevent electrical shock, disconnect electrical supply before installing or servicing.

PICASSO LIGHTING

Wall-mounted

Before Beginning Installation, Locate the Following Components, Gather Required Tools:

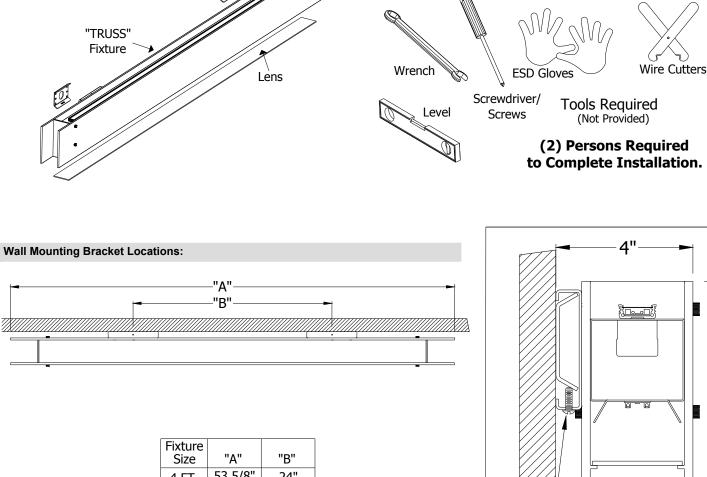

Size	"A"	B
4 FT.	53 5/8"	24"
5 FT.	65 5/8"	36"
6 FT.	77 5/8"	48"
7 FT.	89 5/8"	60"
8 FT.	101 5/8"	72"

6" Locking Screw


Service Hotline: 1-201-246-8188 Monday through Friday 9:00AM - 5:00PM


TRUSS series LED Individual

Wall-mounted

PICASSO LIGHTING

INSTALLATION PROCEDURE (Sheet 2 of 2)

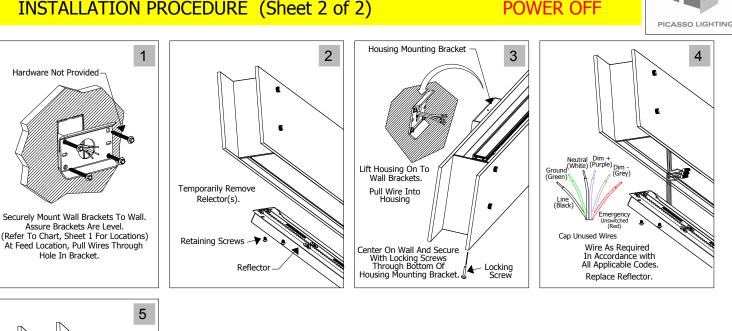


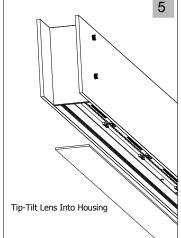

Hole In Bracket.

Hardware Not Provided

"EM" Battery Pack Activation

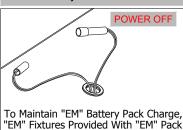

Disconnected As Shown.

To Activate "EM" Battery Pack, Plug Together As Shown. Insert Wires Into Hole And Cap With Plug Provided.

Service Hotline: 1-201-246-8188 Monday through Friday 9:00AM -5:00PM

DO NOT DISCARD PLEASE READ CAREFULLY BEFORE BEGINNING INSTALLATION.

Installation and maintenance of the TRUSS luminaire may only be performed by gualified and licensed electricians in accordance with all applicable codes and standards.

Picasso Lighting Indstries, LLC assumes no responsibility or liability for any unauthorized changes or modifications to the TRUSS luminaire. The TRUSS luminaire is not intended for outdoor use.

Picasso Lighting Industries, LLC. shall assume no responsibility or liability for the integrity of the mounting surface and structure as well as the integrity of all components not provided by Picasso Lighting Industries, LLC.

Turn off line voltage and allow luminaire to completely cool before performing any maintenance including routine cleaning of luminaire.

Avoid touching LED light emitting surfaces while installing, replacing or providing maintenance to the luminaire.

Luminous flux and connected electrical load are subject to an initial tolerance of +/- 10%.

Color temperature (k) is subject to a tolerance of +/- 150k from the nominal value.

Any component contained is this luminaire can only be replaced by the manufacturer or an agent thereof.

Keep these INSTALLATION INSTRUCTIONS in a secure and readily accessible place for any future maintenance or for reference.