

FRAME OUT™, Recessed SF-Trimless



DO NOT DISCARD

PLEASE READ CAREFULLY BEFORE BEGINNING INSTALLATION.

Fixtures must be installed by licensed electricians in accordance with all local and national codes.

To prevent electrical shock, disconnect electrical supply before installing or servicing.


Before Beginning Installation, Locate The Following Components. Gather Required Tools.

IMPORTANT SAFEGUARDS: When using electrical equipment, always adhere to basic safety precautions including the following: The battery in this unit may not be fully charged. After electricity is connected to unit, let battery charge for at least 48 hours, then normal operation of this unit should take effect.


READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use outdoors.
2. Equipment should be mounted securely in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel.
3. Do not mount near gas or electric heaters.
4. Do not use this equipment for anything other than its intended use.
5. The use of accessory equipment not recommended by the manufacturer will void product listing and warranty and may cause an unsafe condition.
6. Disconnect AC power before servicing and installation.
7. Use caution when servicing batteries.
8. Any service on this equipment should be performed by qualified personnel only.
9. Cap unused wires with enclosed wire nuts or other approved method.
10. Make sure wire terminations are secure and leads are properly tucked in appropriate wireways.

Tools Required (Not Provided)

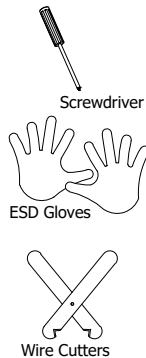

Service Hotline: (201) 246-8188
Monday through Friday 9:00AM - 5:00PM

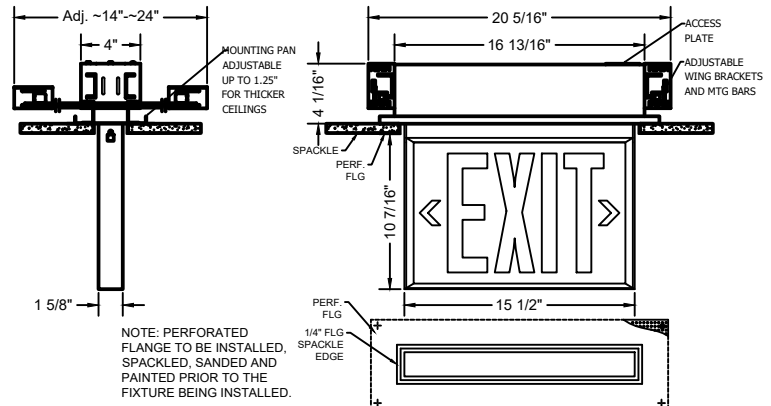

To Begin Installation:

POWER OFF

Installation Instructions

1. Install Recessed Housing into ceiling opening, Install hanger bars thru butterfly brackets (Note: Due to hanger bar variations it may be necessary to SQUEEZE Bracket for Proper Fit), secure to structure and level to finished ceiling by adjusting wing nuts from inside of the housing.
2. Remove access plate from top of housing and Connect AC input leads to AC power supply leads. Connect the red lead to a 277VAC Power Supply or the black lead to a 120VAC Power Supply, (Cap the UNUSED red or black lead) and the white lead to neutral.
3. Install Sheetrock ceiling aligned to bottom flange of mounting pan.
4. Install SF-Spackle Flange Trimless frame assembly into mounting pan by squeezing spring clips and snap into place. Install sheetrock screws thru perforated flange. Tape, Spackle and Sand as required to desired finish level and paint ceiling.
5. Secure Safety cable to EXIT Sign
6. Connect Wiring Quick Disconnect from housing assembly to Exit Sign.
7. Install EXIT Sign thru the TRIM FRAME Opening into the Housing (Note: make sure the EXIT SIGN snaps onto Springs located in the Housing. Make sure to guide Wiring and safety cable into Housing.
8. Chevron directional indicators are preassembled. Peel off Chevron as required based upon installed location.
9. Turn on Power, Allow 48 Hour Continuous Operation for Battery to Charge.

Wiring Diagram

