



Picasso Lighting

IES INDOOR REPORT

PHOTOMETRIC FILENAME : DRM-RI-2X2-DR2-35-80-OW-XX(GRID)-XX-W.IES

DESCRIPTION INFORMATION (From Photometric File)

IESNA:LM-63-2002
[TEST] LLIA002143-003
[TESTLAB] LightLab International Allentown, LLC
[ISSUEDATE] 6/23/2023
[MANUFAC] Picasso Lighting Industries, LLC
[LUMCAT] DRM-RI-2x2-DR2-35-80-OW-XX(GRID)-XX-W
[LUMINAIRE] Recessed mounted, formed steel housing with white painted plastic
[MORE] reflector and trim, no enclosure.
[LAMP] 144 white LEDs, 12 LEDs on 4 LED boards and 24 LEDs on 4 boards
[BALLAST] One Advance XI054C150V054BST1 LED driver labeled as 1400mA
[OTHER] 120.0Vac, 60.00Hz, 29.82W, 0.993PF, 5.1%THD(i)
[OTHER] This file was modified from DRM-RI-2x2-DR2-30-80-OW-XX(GRID)-XX-W.
[MORE] Lamp lumens value was set to -1

CHARACTERISTICS

Lumens Per Lamp	N.A. (absolute)
Total Lamp Lumens	N.A. (absolute)
Luminaire Lumens	2500
Total Luminaire Efficiency	N.A.
Luminaire Efficacy Rating (LER)	84
Total Luminaire Watts	29.82
Ballast Factor	1.00
CIE Type	Direct
Spacing Criterion (0-180)	1.34
Spacing Criterion (90-270)	1.34
Spacing Criterion (Diagonal)	1.50
Basic Luminous Shape	Rectangular
Luminous Length (0-180)	1.53 ft
Luminous Width (90-270)	1.53 ft
Luminous Height	0.00 ft

LUMINANCE DATA (cd/sq.m)

Angle In Degrees	Average 0-Deg	Average 45-Deg	Average 90-Deg
45	3363	3373	3377
55	3632	3595	3656
65	4186	4081	4230
75	5323	5034	5405
85	5754	5135	5968

IES INDOOR REPORT

PHOTOMETRIC FILENAME : DRM-RI-2X2-DR2-35-80-OW-XX(GRID)-XX-W.IES

CANDELA TABULATION

	<u>0.0</u>	<u>22.5</u>	<u>45.0</u>	<u>67.5</u>	<u>90.0</u>
0.0	672.11	672.11	672.11	672.11	672.11
0.5	672.63	672.11	672.11	672.11	672.11
1.0	672.63	672.11	672.11	672.11	672.11
1.5	672.11	672.11	672.11	672.11	672.11
2.0	672.11	671.60	672.11	671.60	672.11
2.5	672.11	671.60	672.11	671.60	672.11
3.0	672.11	671.60	671.60	671.60	671.60
3.5	671.60	671.60	671.60	671.09	671.60
4.0	671.60	671.09	671.60	671.09	671.60
4.5	671.09	670.58	671.09	671.09	671.09
5.0	671.09	670.58	670.58	670.58	670.58
5.5	670.58	670.07	670.58	670.07	670.58
6.0	670.07	669.56	670.07	670.07	670.07
6.5	669.56	669.56	669.56	669.56	669.56
7.0	669.05	669.05	669.56	669.05	669.56
7.5	669.05	668.54	669.05	668.54	669.05
8.0	668.54	668.03	668.54	668.54	668.54
8.5	667.52	667.52	668.03	668.03	668.03
9.0	667.01	667.01	667.52	667.52	667.52
9.5	666.50	666.50	667.01	667.01	667.01
10.0	665.99	665.47	666.50	666.50	666.50
10.5	665.47	664.96	665.47	665.47	665.99
11.0	664.45	664.45	664.96	664.96	665.47
11.5	663.94	663.43	664.45	664.45	664.96
12.0	662.92	662.92	663.43	663.94	663.94
12.5	662.41	662.41	662.92	662.92	663.43
13.0	661.39	661.39	661.90	662.41	662.41
13.5	660.37	660.37	661.39	661.39	661.90
14.0	659.86	659.86	660.37	660.88	660.88
14.5	658.84	658.84	659.86	659.86	659.86
15.0	657.81	657.81	658.84	658.84	659.35
15.5	656.79	656.79	657.81	657.81	657.81
16.0	655.26	655.77	656.79	656.79	656.79
16.5	654.24	654.75	655.77	655.77	655.77
17.0	652.71	653.73	654.75	654.75	654.24
17.5	651.69	652.20	653.73	653.22	653.22
18.0	650.15	651.17	652.71	652.20	651.69
18.5	648.62	649.64	651.69	650.66	650.15
19.0	647.09	648.11	650.66	649.13	648.62
19.5	646.07	647.09	649.64	648.11	647.09
20.0	644.02	645.56	648.11	646.58	645.56
20.5	642.49	644.02	646.58	645.05	644.02
21.0	640.96	642.49	645.56	643.51	642.49
21.5	639.43	640.45	644.02	641.47	640.96
22.0	637.39	638.92	642.49	639.94	638.92
22.5	635.85	637.39	640.45	638.41	637.39
23.0	633.81	635.85	638.92	636.36	635.34
23.5	631.77	633.81	637.39	634.83	633.30
24.0	630.23	631.77	635.34	632.79	631.77
24.5	628.19	630.23	633.81	630.75	629.72
25.0	626.15	628.19	631.77	629.21	627.68
25.5	624.11	626.15	629.72	627.17	625.64
26.0	622.06	624.11	627.68	625.13	623.60
26.5	619.51	622.06	625.64	623.08	621.04

IES INDOOR REPORT**PHOTOMETRIC FILENAME : DRM-RI-2X2-DR2-35-80-OW-XX(GRID)-XX-W.IES****CANDELA TABULATION - (Cont.)**

27.0	617.47	620.02	623.60	621.04	619.00
27.5	615.42	617.98	621.55	619.00	616.96
28.0	612.87	615.93	619.00	616.45	614.91
28.5	610.32	613.89	616.96	614.40	612.36
29.0	608.27	611.34	614.40	612.36	609.81
29.5	605.72	609.30	612.36	609.81	607.76
30.0	603.17	606.74	609.81	607.76	605.21
30.5	600.61	604.70	607.25	605.21	602.66
31.0	598.06	602.15	604.70	603.17	600.10
31.5	595.51	599.59	602.66	600.61	597.55
32.0	592.95	597.04	600.10	598.06	594.99
32.5	590.40	594.48	597.04	595.51	592.44
33.0	587.84	591.93	594.48	592.95	589.89
33.5	585.29	589.38	591.93	590.40	586.82
34.0	582.23	586.82	589.38	587.84	584.27
34.5	579.67	584.27	586.31	584.78	581.72
35.0	577.12	581.21	583.76	582.23	578.65
35.5	574.06	578.65	580.69	579.16	576.10
36.0	571.50	575.59	578.14	576.61	573.54
36.5	568.44	573.03	575.08	574.06	570.48
37.0	565.88	569.97	572.01	570.99	567.42
37.5	562.82	567.42	568.95	567.93	564.86
38.0	559.75	564.35	565.88	565.37	561.80
38.5	557.20	561.29	562.82	562.31	559.24
39.0	554.14	558.22	559.75	559.24	556.18
39.5	551.07	555.67	556.69	556.18	553.12
40.0	548.01	552.09	553.12	553.12	550.56
40.5	545.45	549.54	550.05	550.05	547.50
41.0	542.39	546.48	546.99	547.50	544.43
41.5	539.33	543.41	543.41	543.92	541.37
42.0	536.26	540.35	540.35	540.86	538.82
42.5	533.20	537.28	536.77	537.79	535.75
43.0	530.64	533.71	533.71	534.73	532.69
43.5	527.58	530.64	530.13	531.66	529.62
44.0	524.51	527.58	526.56	528.60	526.56
44.5	520.94	524.51	522.98	525.54	523.49
45.0	518.39	521.45	519.92	521.96	520.43
45.5	514.81	517.88	516.34	518.90	517.36
46.0	511.75	514.81	512.77	515.83	514.30
46.5	508.68	511.75	509.70	512.77	511.24
47.0	505.62	508.17	506.13	509.19	508.17
47.5	502.55	505.11	502.55	506.13	505.11
48.0	499.49	501.53	498.98	502.55	502.04
48.5	496.42	498.47	495.40	499.49	498.98
49.0	492.85	494.89	491.83	495.91	495.40
49.5	489.79	491.32	488.76	492.85	492.34
50.0	486.72	488.25	485.19	489.27	489.27
50.5	483.66	484.68	481.61	486.21	486.21
51.0	480.59	481.61	478.04	482.64	483.15
51.5	477.02	478.04	474.46	479.57	480.08
52.0	473.95	474.46	470.89	476.00	476.51
52.5	470.89	471.40	467.31	472.42	473.44
53.0	467.31	467.82	463.74	469.36	470.38
53.5	464.25	464.25	460.16	465.78	467.31
54.0	460.67	460.67	456.59	462.21	463.74
54.5	457.61	457.10	453.01	458.63	460.67

IES INDOOR REPORT**PHOTOMETRIC FILENAME : DRM-RI-2X2-DR2-35-80-OW-XX(GRID)-XX-W.IES****CANDELA TABULATION - (Cont.)**

55.0	454.03	453.52	449.44	455.06	457.10
55.5	450.97	449.95	446.37	451.99	454.03
56.0	447.40	446.37	442.29	447.91	450.97
56.5	444.33	442.80	438.71	444.84	447.40
57.0	440.76	439.22	435.14	441.27	444.33
57.5	437.69	435.65	431.56	437.69	440.76
58.0	434.12	432.07	427.99	434.12	437.69
58.5	430.54	428.50	424.41	430.54	434.12
59.0	427.48	424.92	420.84	426.46	431.05
59.5	423.90	420.84	417.26	422.88	427.48
60.0	420.84	417.26	413.69	419.31	424.41
60.5	417.26	413.69	410.11	415.73	420.84
61.0	413.69	409.60	406.54	412.16	417.77
61.5	410.11	406.03	402.45	408.58	414.20
62.0	407.05	402.45	398.88	404.49	410.62
62.5	403.47	398.37	395.30	400.92	407.05
63.0	399.90	394.79	391.22	397.34	403.47
63.5	396.32	391.22	387.64	393.26	400.41
64.0	392.75	387.13	384.07	389.68	396.83
64.5	389.17	383.04	379.98	386.11	393.26
65.0	385.60	379.47	375.89	382.02	389.68
65.5	381.51	375.38	372.32	377.94	386.11
66.0	377.94	371.30	368.23	373.85	382.02
66.5	374.36	367.72	364.15	370.28	378.45
67.0	370.79	363.64	360.06	366.19	374.87
67.5	366.70	359.55	355.98	362.10	371.30
68.0	363.13	355.46	351.89	358.02	367.72
68.5	359.04	351.38	347.80	353.93	363.64
69.0	355.46	347.29	343.72	349.85	359.55
69.5	351.38	342.70	339.12	345.25	355.98
70.0	347.29	338.61	335.04	341.16	351.89
70.5	343.21	334.01	329.93	336.57	347.80
71.0	339.12	329.42	325.84	331.97	343.21
71.5	334.53	324.82	320.74	327.37	339.12
72.0	329.93	320.22	316.14	322.78	334.53
72.5	325.84	315.63	311.03	317.67	330.44
73.0	321.25	310.52	305.92	313.07	325.33
73.5	316.14	305.41	300.82	307.46	320.74
74.0	311.03	299.80	295.20	302.35	315.63
74.5	305.92	294.69	289.58	296.73	310.52
75.0	300.31	288.56	283.96	291.11	304.90
75.5	294.18	282.94	277.83	284.98	299.28
76.0	287.54	276.30	271.20	278.86	292.65
76.5	280.90	269.66	264.56	272.22	286.01
77.0	273.24	262.51	257.92	265.07	278.35
77.5	264.56	254.85	250.77	257.41	269.15
78.0	254.85	246.68	243.11	248.72	258.94
78.5	244.13	237.49	234.93	239.53	247.70
79.0	232.89	227.78	226.25	229.32	235.96
79.5	221.65	216.55	217.57	218.08	224.72
80.0	211.44	205.82	207.87	207.35	213.99
80.5	201.23	195.61	197.65	196.63	203.78
81.0	192.03	185.39	187.44	186.41	194.59
81.5	182.84	175.69	177.22	176.71	185.39
82.0	173.65	165.99	165.99	166.50	176.20
82.5	163.94	156.28	155.77	157.30	167.01

IES INDOOR REPORT**PHOTOMETRIC FILENAME : DRM-RI-2X2-DR2-35-80-OW-XX(GRID)-XX-W.IES****CANDELA TABULATION - (Cont.)**

83.0	154.24	146.07	144.54	147.09	157.30
83.5	144.02	135.85	133.30	136.36	147.60
84.0	133.30	124.62	122.06	125.64	136.87
84.5	122.06	113.38	109.81	114.40	125.64
85.0	109.30	101.12	97.55	102.15	113.38
85.5	96.53	88.36	84.78	89.38	100.10
86.0	82.74	75.59	71.50	76.10	85.80
86.5	67.93	61.29	57.71	61.80	69.97
87.0	52.60	47.50	44.43	47.50	53.12
87.5	36.26	33.20	31.66	32.69	35.75
88.0	21.96	20.94	19.92	19.92	19.92
88.5	11.24	10.73	11.24	10.21	10.21
89.0	7.15	6.64	6.13	6.13	6.13
89.5	2.55	2.55	2.55	3.06	3.06
90.0	0.00	0.51	0.51	1.02	1.02
90.5	0.00	0.00	0.00	0.00	0.00
91.0	0.00	0.00	0.00	0.00	0.00
91.5	0.00	0.00	0.00	0.00	0.00
92.0	0.00	0.00	0.00	0.00	0.00
92.5	0.00	0.00	0.00	0.00	0.00
93.0	0.00	0.00	0.00	0.00	0.00
93.5	0.00	0.00	0.00	0.00	0.00
94.0	0.00	0.00	0.00	0.00	0.00
94.5	0.00	0.00	0.00	0.00	0.00
95.0	0.00	0.00	0.00	0.00	0.00
95.5	0.00	0.00	0.00	0.00	0.00
96.0	0.00	0.00	0.00	0.00	0.00
96.5	0.00	0.00	0.00	0.00	0.00
97.0	0.00	0.00	0.00	0.00	0.00
97.5	0.00	0.00	0.00	0.00	0.00
98.0	0.00	0.00	0.00	0.00	0.00
98.5	0.00	0.00	0.00	0.00	0.00
99.0	0.00	0.00	0.00	0.00	0.00
99.5	0.00	0.00	0.00	0.00	0.00
100.0	0.00	0.00	0.00	0.00	0.00
100.5	0.00	0.00	0.00	0.00	0.00
101.0	0.00	0.00	0.00	0.00	0.00
101.5	0.00	0.00	0.00	0.00	0.00
102.0	0.00	0.00	0.00	0.00	0.00
102.5	0.00	0.00	0.00	0.00	0.00
103.0	0.00	0.00	0.00	0.00	0.00
103.5	0.00	0.00	0.00	0.00	0.00
104.0	0.00	0.00	0.00	0.00	0.00
104.5	0.00	0.00	0.00	0.00	0.00
105.0	0.00	0.00	0.00	0.00	0.00
105.5	0.00	0.00	0.00	0.00	0.00
106.0	0.00	0.00	0.00	0.00	0.00
106.5	0.00	0.00	0.00	0.00	0.00
107.0	0.00	0.00	0.00	0.00	0.00
107.5	0.00	0.00	0.00	0.00	0.00
108.0	0.00	0.00	0.00	0.00	0.00
108.5	0.00	0.00	0.00	0.00	0.00
109.0	0.00	0.00	0.00	0.00	0.00
109.5	0.00	0.00	0.00	0.00	0.00
110.0	0.00	0.00	0.00	0.00	0.00
110.5	0.00	0.00	0.00	0.00	0.00

IES INDOOR REPORT**PHOTOMETRIC FILENAME : DRM-RI-2X2-DR2-35-80-OW-XX(GRID)-XX-W.IES****CANDELA TABULATION - (Cont.)**

111.0	0.00	0.00	0.00	0.00	0.00
111.5	0.00	0.00	0.00	0.00	0.00
112.0	0.00	0.00	0.00	0.00	0.00
112.5	0.00	0.00	0.00	0.00	0.00
113.0	0.00	0.00	0.00	0.00	0.00
113.5	0.00	0.00	0.00	0.00	0.00
114.0	0.00	0.00	0.00	0.00	0.00
114.5	0.00	0.00	0.00	0.00	0.00
115.0	0.00	0.00	0.00	0.00	0.00
115.5	0.00	0.00	0.00	0.00	0.00
116.0	0.00	0.00	0.00	0.00	0.00
116.5	0.00	0.00	0.00	0.00	0.00
117.0	0.00	0.00	0.00	0.00	0.00
117.5	0.00	0.00	0.00	0.00	0.00
118.0	0.00	0.00	0.00	0.00	0.00
118.5	0.00	0.00	0.00	0.00	0.00
119.0	0.00	0.00	0.00	0.00	0.00
119.5	0.00	0.00	0.00	0.00	0.00
120.0	0.00	0.00	0.00	0.00	0.00
120.5	0.00	0.00	0.00	0.00	0.00
121.0	0.00	0.00	0.00	0.00	0.00
121.5	0.00	0.00	0.00	0.00	0.00
122.0	0.00	0.00	0.00	0.00	0.00
122.5	0.00	0.00	0.00	0.00	0.00
123.0	0.00	0.00	0.00	0.00	0.00
123.5	0.00	0.00	0.00	0.00	0.00
124.0	0.00	0.00	0.00	0.00	0.00
124.5	0.00	0.00	0.00	0.00	0.00
125.0	0.00	0.00	0.00	0.00	0.00
125.5	0.00	0.00	0.00	0.00	0.00
126.0	0.00	0.00	0.00	0.00	0.00
126.5	0.00	0.00	0.00	0.00	0.00
127.0	0.00	0.00	0.00	0.00	0.00
127.5	0.00	0.00	0.00	0.00	0.00
128.0	0.00	0.00	0.00	0.00	0.00
128.5	0.00	0.00	0.00	0.00	0.00
129.0	0.00	0.00	0.00	0.00	0.00
129.5	0.00	0.00	0.00	0.00	0.00
130.0	0.00	0.00	0.00	0.00	0.00
130.5	0.00	0.00	0.00	0.00	0.00
131.0	0.00	0.00	0.00	0.00	0.00
131.5	0.00	0.00	0.00	0.00	0.00
132.0	0.00	0.00	0.00	0.00	0.00
132.5	0.00	0.00	0.00	0.00	0.00
133.0	0.00	0.00	0.00	0.00	0.00
133.5	0.00	0.00	0.00	0.00	0.00
134.0	0.00	0.00	0.00	0.00	0.00
134.5	0.00	0.00	0.00	0.00	0.00
135.0	0.00	0.00	0.00	0.00	0.00
135.5	0.00	0.00	0.00	0.00	0.00
136.0	0.00	0.00	0.00	0.00	0.00
136.5	0.00	0.00	0.00	0.00	0.00
137.0	0.00	0.00	0.00	0.00	0.00
137.5	0.00	0.00	0.00	0.00	0.00
138.0	0.00	0.00	0.00	0.00	0.00
138.5	0.00	0.00	0.00	0.00	0.00

IES INDOOR REPORT**PHOTOMETRIC FILENAME : DRM-RI-2X2-DR2-35-80-OW-XX(GRID)-XX-W.IES****CANDELA TABULATION - (Cont.)**

139.0	0.00	0.00	0.00	0.00	0.00
139.5	0.00	0.00	0.00	0.00	0.00
140.0	0.00	0.00	0.00	0.00	0.00
140.5	0.00	0.00	0.00	0.00	0.00
141.0	0.00	0.00	0.00	0.00	0.00
141.5	0.00	0.00	0.00	0.00	0.00
142.0	0.00	0.00	0.00	0.00	0.00
142.5	0.00	0.00	0.00	0.00	0.00
143.0	0.00	0.00	0.00	0.00	0.00
143.5	0.00	0.00	0.00	0.00	0.00
144.0	0.00	0.00	0.00	0.00	0.00
144.5	0.00	0.00	0.00	0.00	0.00
145.0	0.00	0.00	0.00	0.00	0.00
145.5	0.00	0.00	0.00	0.00	0.00
146.0	0.00	0.00	0.00	0.00	0.00
146.5	0.00	0.00	0.00	0.00	0.00
147.0	0.00	0.00	0.00	0.00	0.00
147.5	0.00	0.00	0.00	0.00	0.00
148.0	0.00	0.00	0.00	0.00	0.00
148.5	0.00	0.00	0.00	0.00	0.00
149.0	0.00	0.00	0.00	0.00	0.00
149.5	0.00	0.00	0.00	0.00	0.00
150.0	0.00	0.00	0.00	0.00	0.00
150.5	0.00	0.00	0.00	0.00	0.00
151.0	0.00	0.00	0.00	0.00	0.00
151.5	0.00	0.00	0.00	0.00	0.00
152.0	0.00	0.00	0.00	0.00	0.00
152.5	0.00	0.00	0.00	0.00	0.00
153.0	0.00	0.00	0.00	0.00	0.00
153.5	0.00	0.00	0.00	0.00	0.00
154.0	0.00	0.00	0.00	0.00	0.00
154.5	0.00	0.00	0.00	0.00	0.00
155.0	0.00	0.00	0.00	0.00	0.00
155.5	0.00	0.00	0.00	0.00	0.00
156.0	0.00	0.00	0.00	0.00	0.00
156.5	0.00	0.00	0.00	0.00	0.00
157.0	0.00	0.00	0.00	0.00	0.00
157.5	0.00	0.00	0.00	0.00	0.00
158.0	0.00	0.00	0.00	0.00	0.00
158.5	0.00	0.00	0.00	0.00	0.00
159.0	0.00	0.00	0.00	0.00	0.00
159.5	0.00	0.00	0.00	0.00	0.00
160.0	0.00	0.00	0.00	0.00	0.00
160.5	0.00	0.00	0.00	0.00	0.00
161.0	0.00	0.00	0.00	0.00	0.00
161.5	0.00	0.00	0.00	0.00	0.00
162.0	0.00	0.00	0.00	0.00	0.00
162.5	0.00	0.00	0.00	0.00	0.00
163.0	0.00	0.00	0.00	0.00	0.00
163.5	0.00	0.00	0.00	0.00	0.00
164.0	0.00	0.00	0.00	0.00	0.00
164.5	0.00	0.00	0.00	0.00	0.00
165.0	0.00	0.00	0.00	0.00	0.00
165.5	0.00	0.00	0.00	0.00	0.00
166.0	0.00	0.00	0.00	0.00	0.00
166.5	0.00	0.00	0.00	0.00	0.00

IES INDOOR REPORT**PHOTOMETRIC FILENAME : DRM-RI-2X2-DR2-35-80-OW-XX(GRID)-XX-W.IES****CANDELA TABULATION - (Cont.)**

167.0	0.00	0.00	0.00	0.00	0.00
167.5	0.00	0.00	0.00	0.00	0.00
168.0	0.00	0.00	0.00	0.00	0.00
168.5	0.00	0.00	0.00	0.00	0.00
169.0	0.00	0.00	0.00	0.00	0.00
169.5	0.00	0.00	0.00	0.00	0.00
170.0	0.00	0.00	0.00	0.00	0.00
170.5	0.00	0.00	0.00	0.00	0.00
171.0	0.00	0.00	0.00	0.00	0.00
171.5	0.00	0.00	0.00	0.00	0.00
172.0	0.00	0.00	0.00	0.00	0.00
172.5	0.00	0.00	0.00	0.00	0.00
173.0	0.00	0.00	0.00	0.00	0.00
173.5	0.00	0.00	0.00	0.00	0.00
174.0	0.00	0.00	0.00	0.00	0.00
174.5	0.00	0.00	0.00	0.00	0.00
175.0	0.00	0.00	0.00	0.00	0.00
175.5	0.00	0.00	0.00	0.00	0.00
176.0	0.00	0.00	0.00	0.00	0.00
176.5	0.00	0.00	0.00	0.00	0.00
177.0	0.00	0.00	0.00	0.00	0.00
177.5	0.00	0.00	0.00	0.00	0.00
178.0	0.00	0.00	0.00	0.00	0.00
178.5	0.00	0.00	0.00	0.00	0.00
179.0	0.00	0.00	0.00	0.00	0.00
179.5	0.00	0.00	0.00	0.00	0.00
180.0	0.00	0.00	0.00	0.00	0.00

IES INDOOR REPORT**PHOTOMETRIC FILENAME : DRM-RI-2X2-DR2-35-80-OW-XX(GRID)-XX-W.IES****ZONAL LUMEN SUMMARY**

Zone	Lumens	%Lamp	%Fixt
0-20	250.00	N.A.	10.00
0-30	540.21	N.A.	21.60
0-40	904.29	N.A.	36.20
0-60	1712.67	N.A.	68.50
0-80	2392.16	N.A.	95.70
0-90	2499.8	N.A.	100.00
10-90	2435.92	N.A.	97.40
20-40	654.29	N.A.	26.20
20-50	1056.58	N.A.	42.30
40-70	1185.76	N.A.	47.40
60-80	679.49	N.A.	27.20
70-80	302.11	N.A.	12.10
80-90	107.64	N.A.	4.30
90-110	0.02	N.A.	0.00
90-120	0.02	N.A.	0.00
90-130	0.02	N.A.	0.00
90-150	0.02	N.A.	0.00
90-180	0.02	N.A.	0.00
110-180	0.00	N.A.	0.00
0-180	2499.82	N.A.	100.00

Total Luminaire Efficiency = N.A.%

ZONAL LUMEN SUMMARY


Zone	Lumens
0-10	63.88
10-20	186.12
20-30	290.21
30-40	364.09
40-50	402.28
50-60	406.09
60-70	377.38
70-80	302.11
80-90	107.64
90-100	0.02
100-110	0.00
110-120	0.00
120-130	0.00
130-140	0.00
140-150	0.00
150-160	0.00
160-170	0.00
170-180	0.00

IES INDOOR REPORT**PHOTOMETRIC FILENAME : DRM-RI-2X2-DR2-35-80-OW-XX(GRID)-XX-W.IES****COEFFICIENTS OF UTILIZATION - ZONAL CAVITY METHOD**

Effective Floor Cavity Reflectance 0.20

RC	80				70				50			30			10			0
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	0
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100
1	106	101	96	91	104	98	94	89	94	90	87	90	87	84	86	84	81	79
2	95	86	78	71	93	84	77	71	80	74	69	77	72	67	74	69	66	63
3	86	74	65	58	84	73	64	57	70	62	56	67	60	55	64	59	54	52
4	78	65	55	48	76	64	55	48	61	53	47	59	52	46	56	50	46	43
5	72	58	48	41	70	57	47	40	54	46	40	52	45	39	50	44	39	37
6	66	52	42	35	64	51	42	35	49	41	35	47	40	34	45	39	34	32
7	61	47	37	31	59	46	37	31	44	36	30	43	35	30	41	35	30	28
8	57	42	33	27	55	42	33	27	40	32	27	39	32	27	38	31	26	24
9	53	39	30	24	51	38	30	24	37	29	24	36	29	24	35	28	24	22
10	50	36	27	22	48	35	27	22	34	27	22	33	26	22	32	26	21	20

POLAR GRAPH

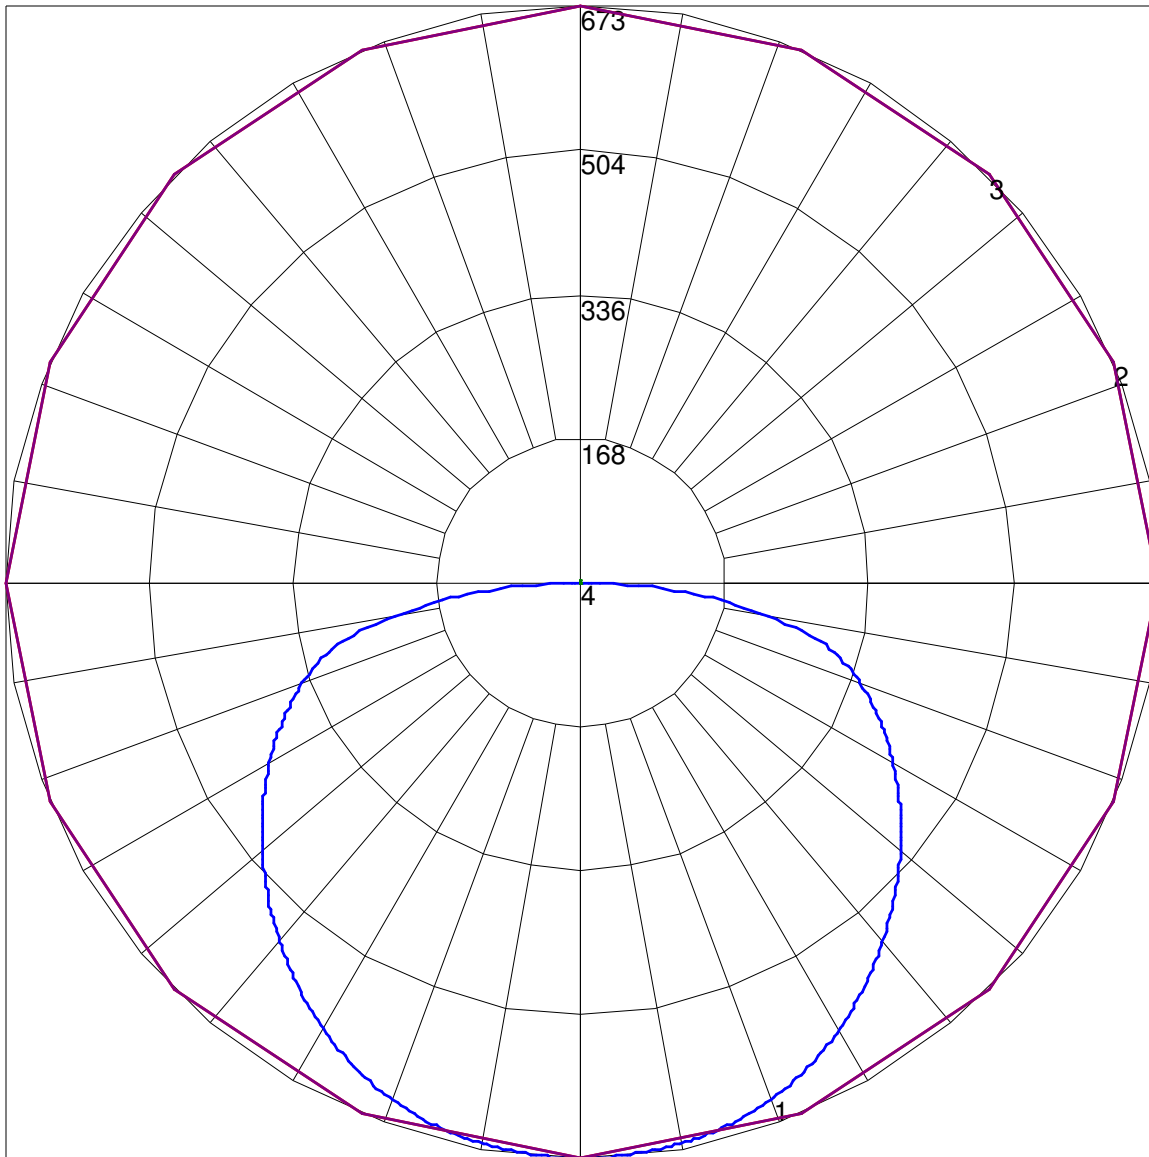

Maximum Candela = 672.63 Located At Horizontal Angle = 0, Vertical Angle = .5
1 - Vertical Plane Through Horizontal Angles (0 - 180) (Through Max. Cd.)
2 - Horizontal Cone Through Vertical Angle (.5) (Through Max. Cd.)
3 - Horizontal Cone Through Vertical Angle (2)
4 - Horizontal Cone Through Vertical Angle (90)